 
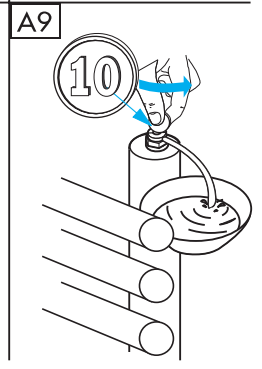 
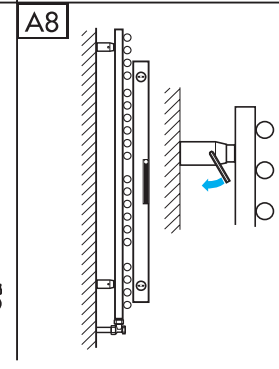 
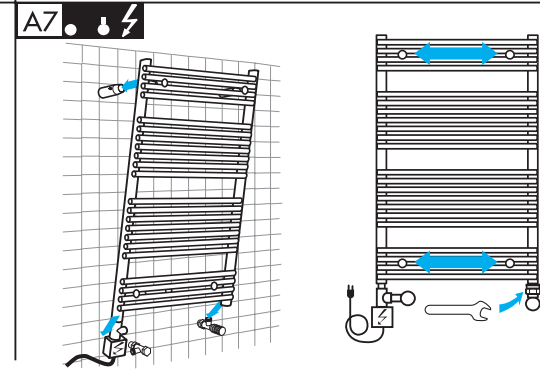 
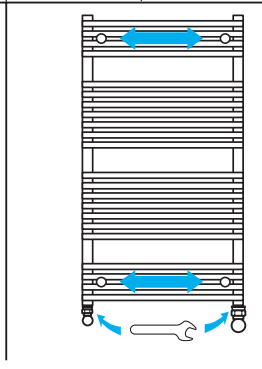 
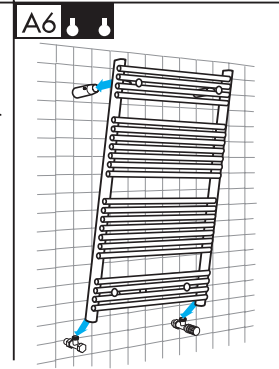 
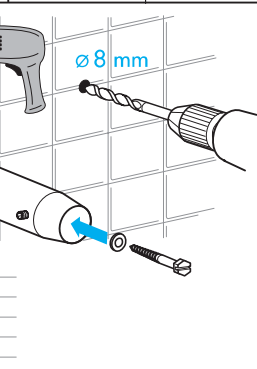 
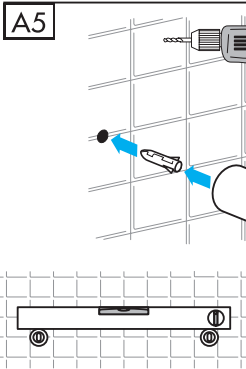 
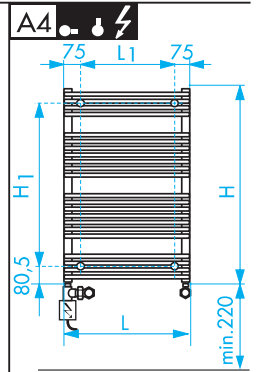 
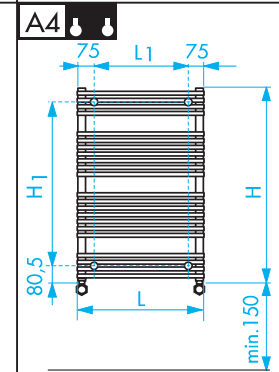 
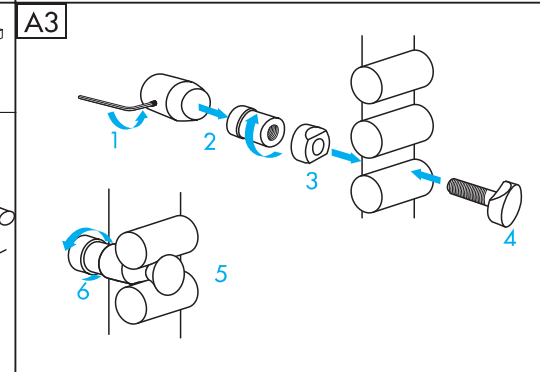 
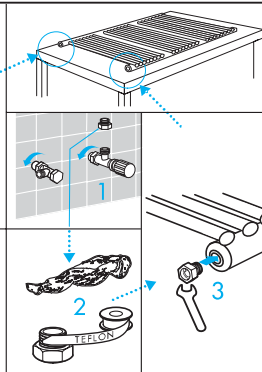 
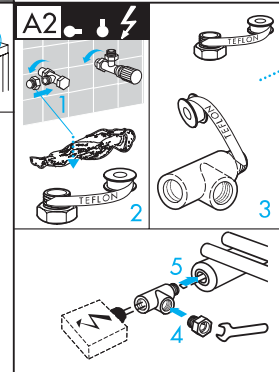 
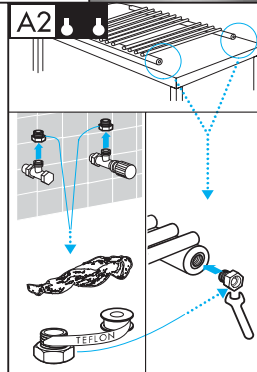 
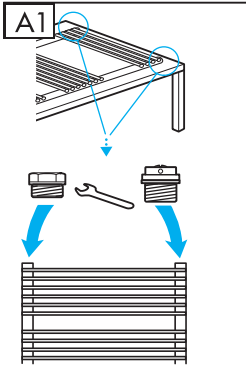 
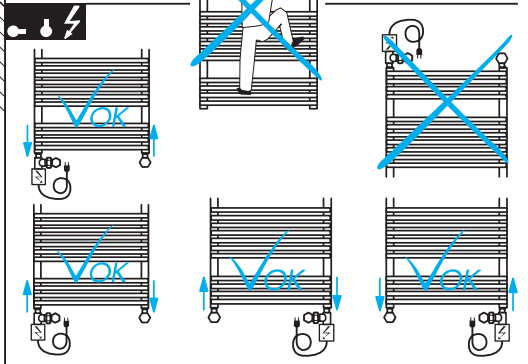 
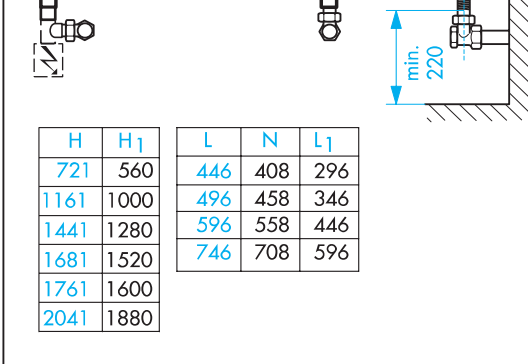 
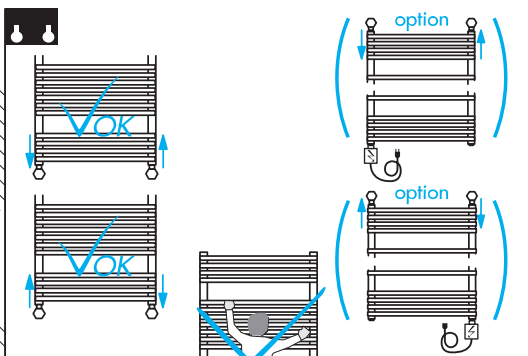 
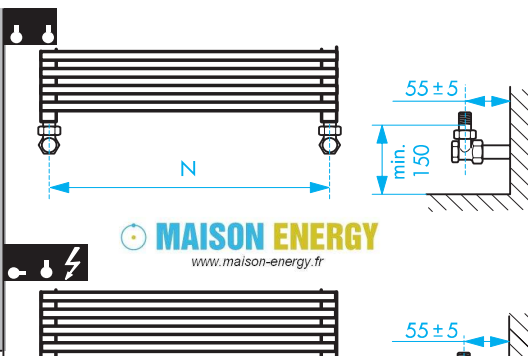 
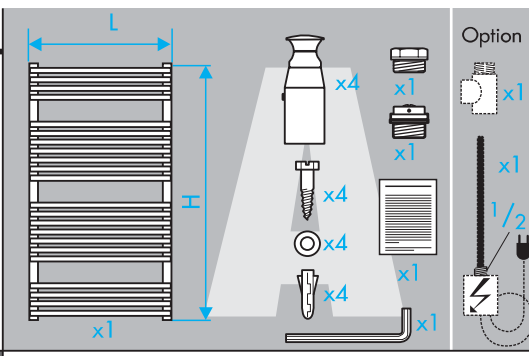 


TYPE MP30

 
 
 
 
- D Montageanleitung
 - GB Assembly Instructions
 - F Instructions de montage
 - I Istruzione di montaggio
 - E Instrucciones de montaje
 - H Szerelési utasítás
 - NL Montageaanwijzing
- © Copyright by PBO 10/07

852 200

Do it yourself










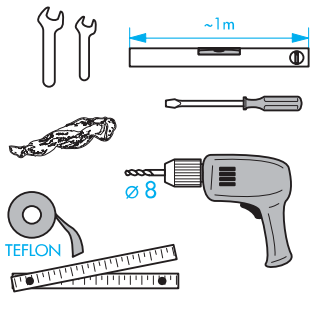


MAISON ENERGY
www.maison-energy.fr

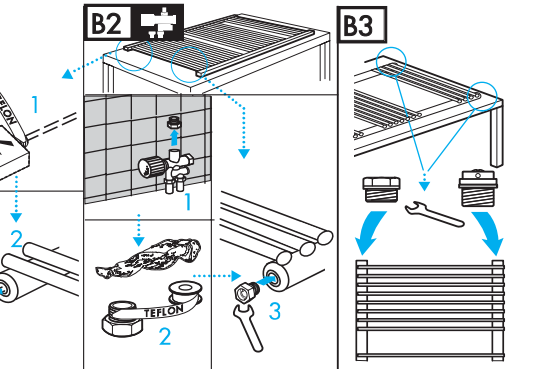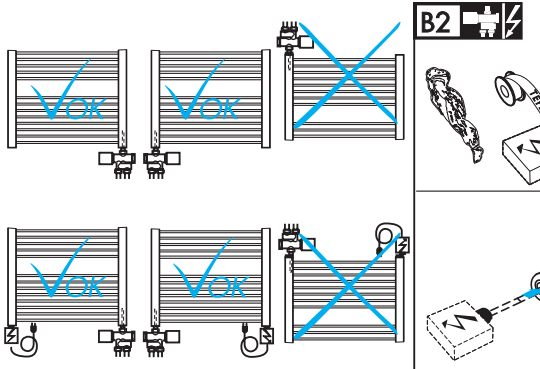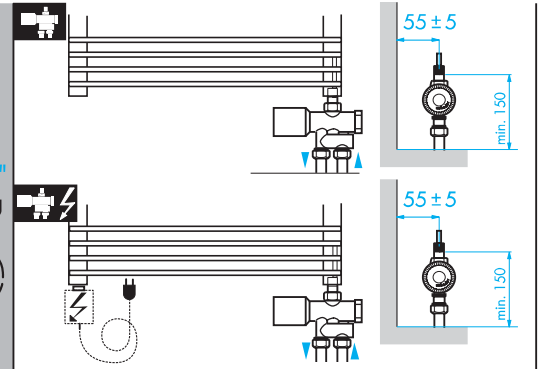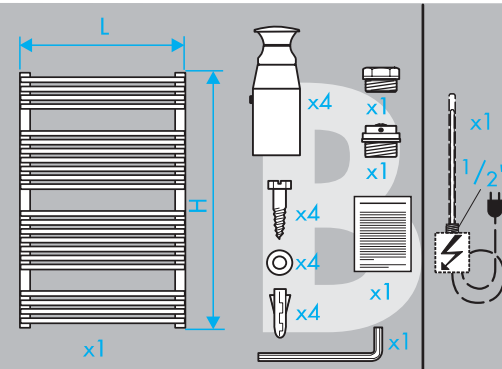

L	L ₁
446	296
496	346
596	446
746	596

H	H ₁
721	560
1161	1000
1441	1280
1681	1520
1761	1600
2041	1880

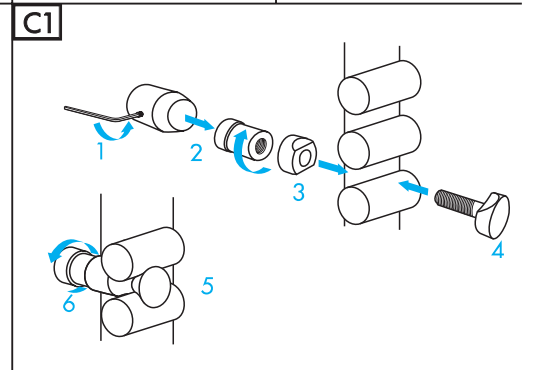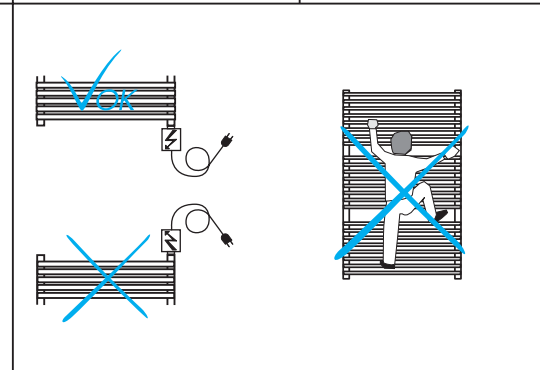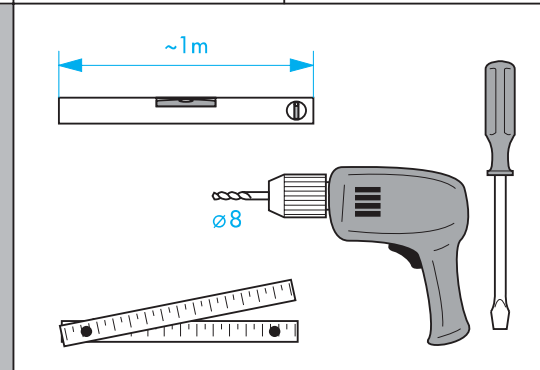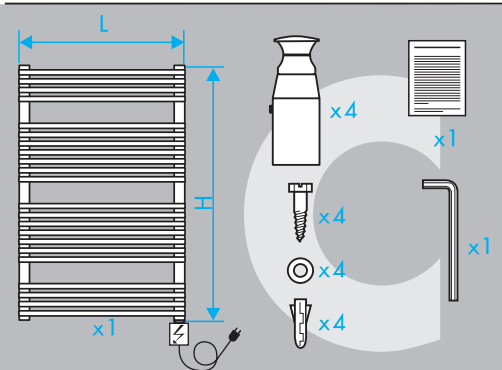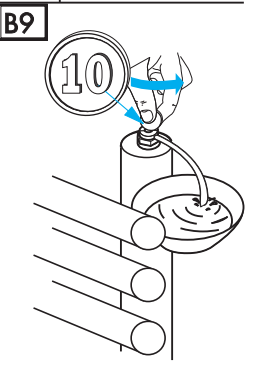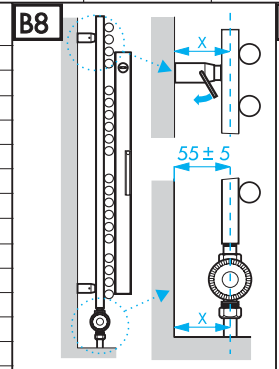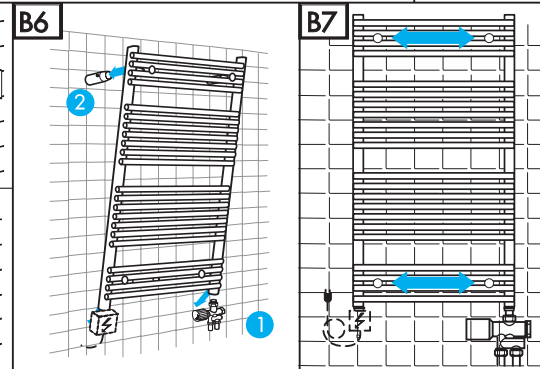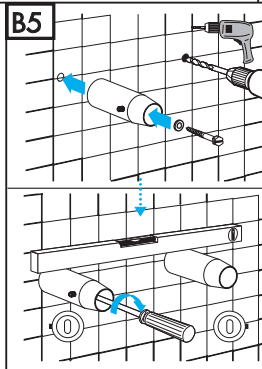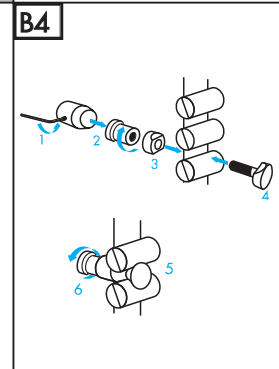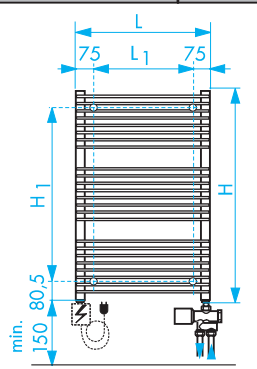          

L	L ₁
446	296
496	346
596	446
746	596

H	H ₁
721	560
1161	1000
1441	1280
1681	1520
1761	1600
2041	1880

