




1 CONTENTS

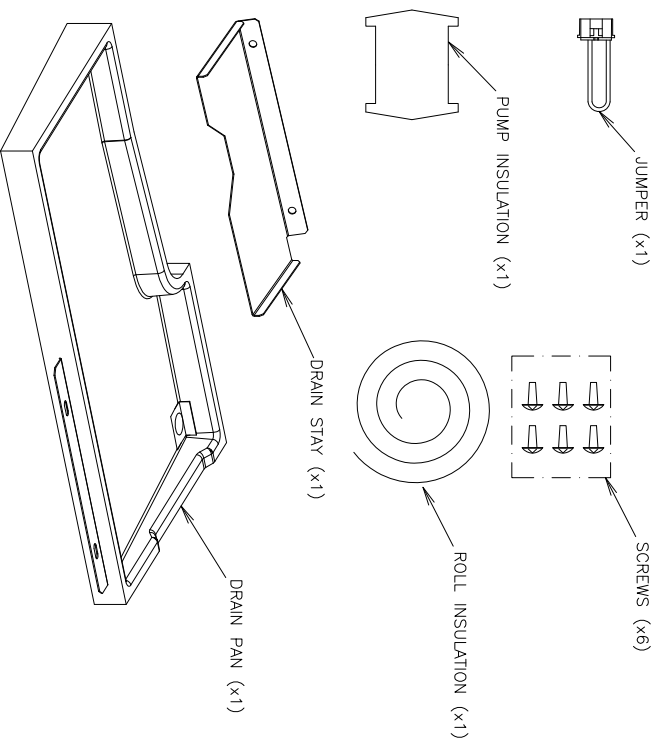


2 REMOVE THE COVER AND ASSEMBLE THE DRAIN STAY

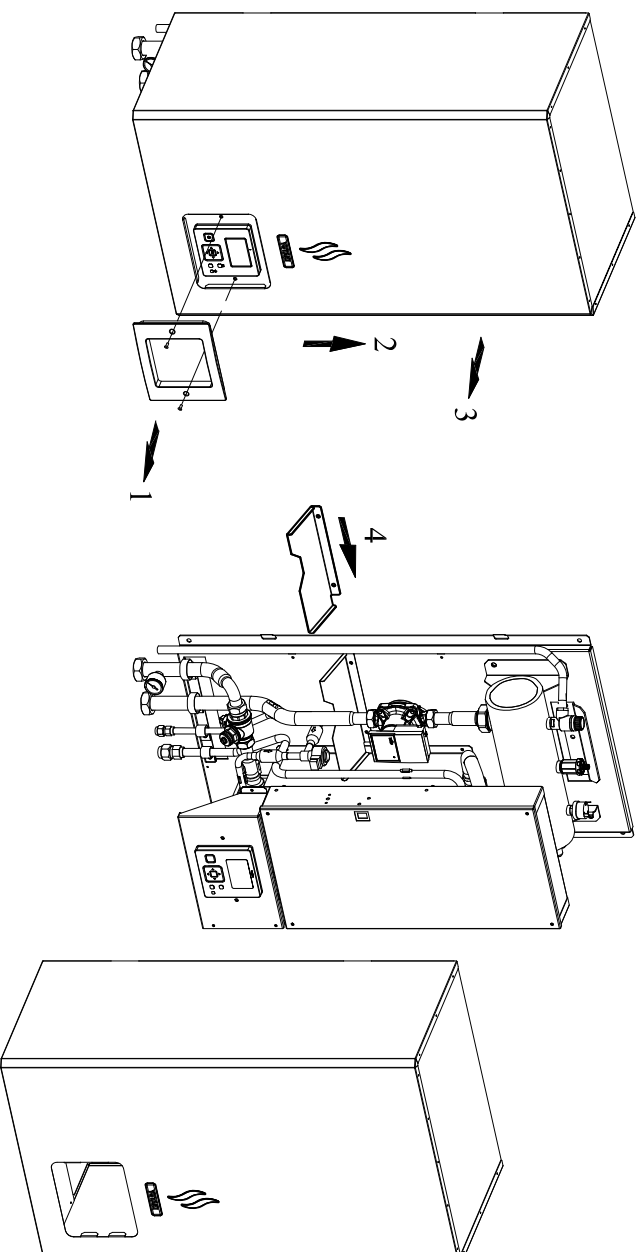

3 ASSEMBLE THE DRAIN PAN AND INSULATION PUMP

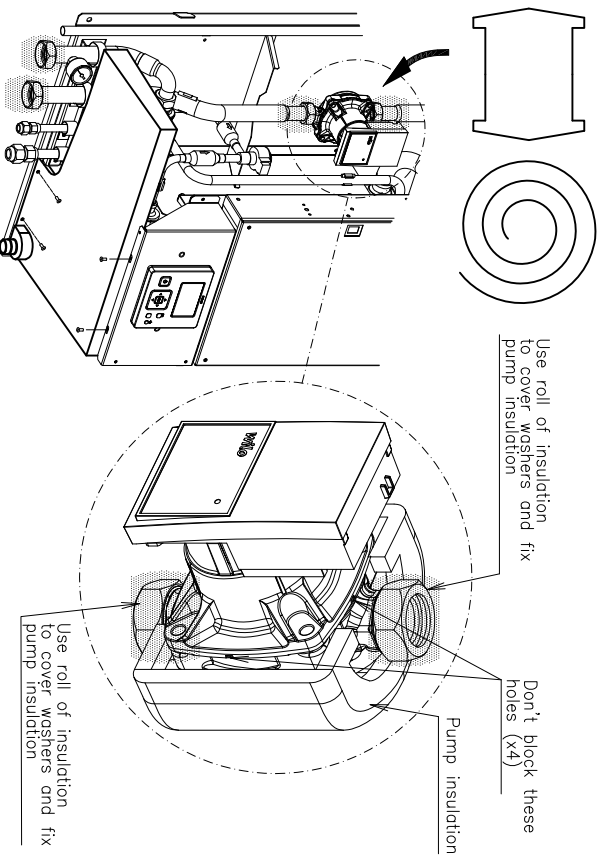

4 INSULATE HYDRAULIC JOINTS (WASHERS)

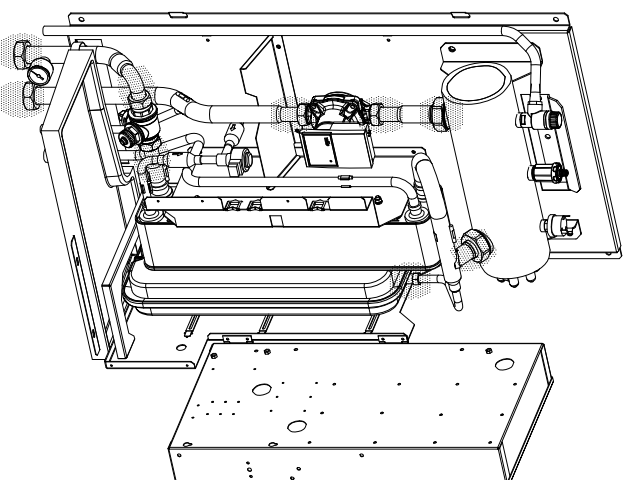

5 TURN ON DSW1-4 AND CONNECT JUMPER TO CN15 (Red)

